


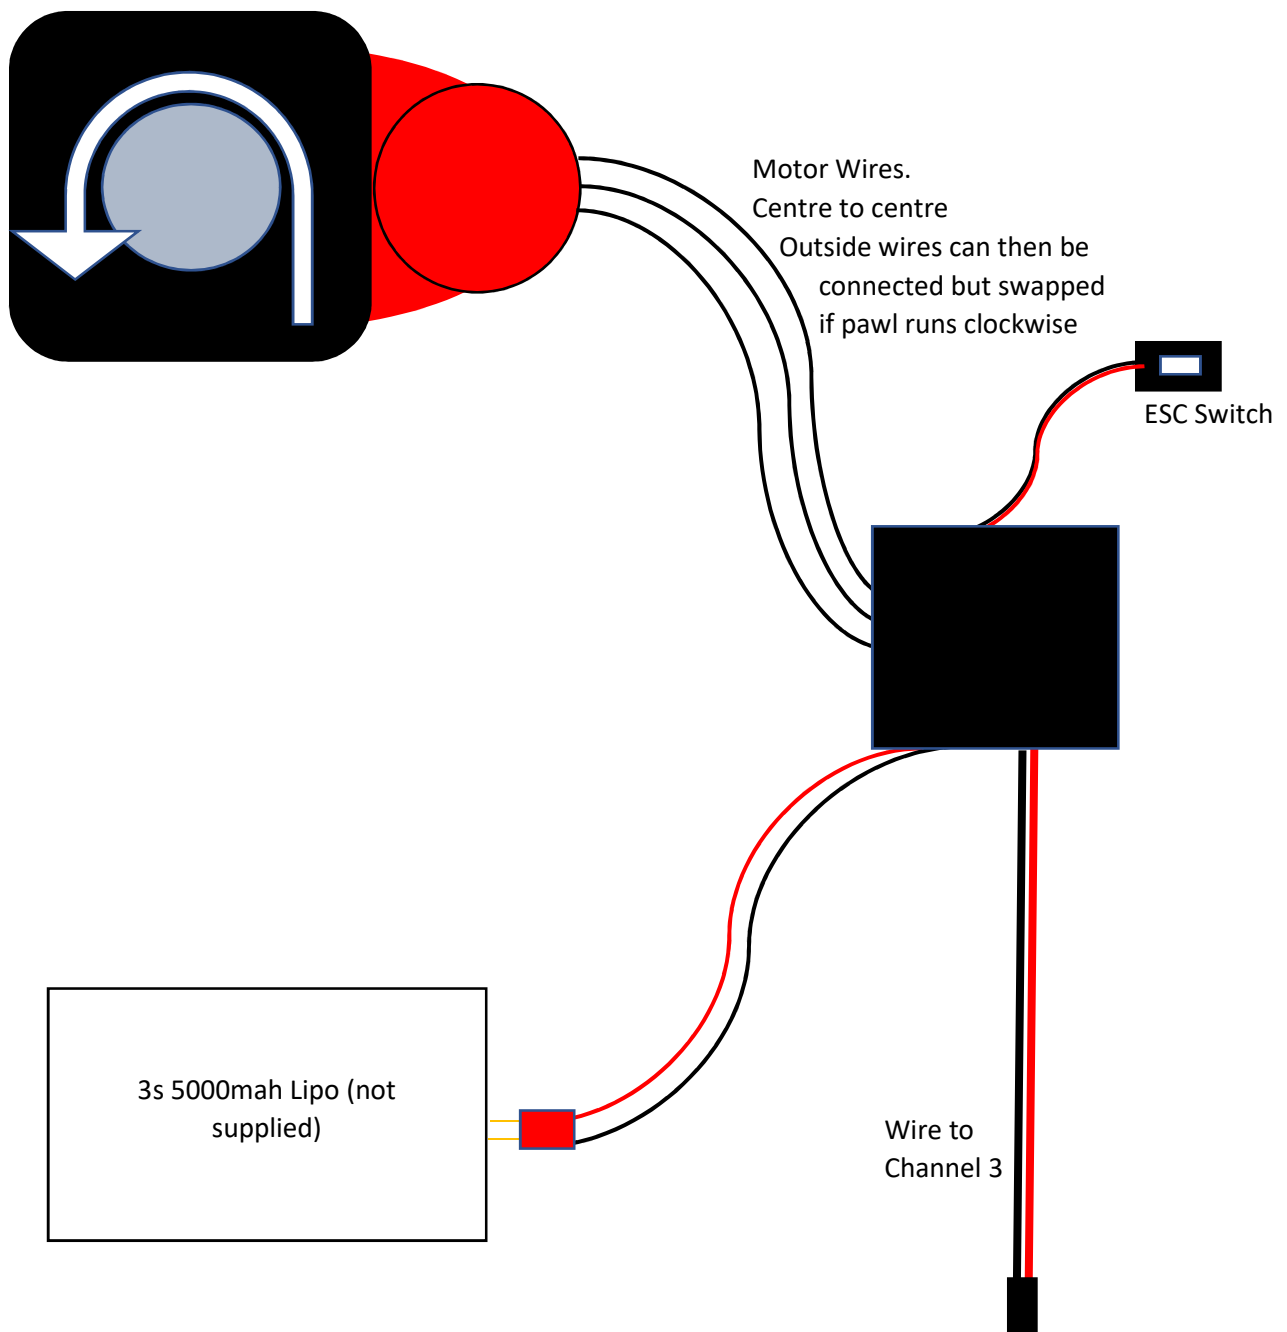

Connect battery to Deans/T plug and the futaba plug from ESC to channel 3 of receiver.

The black box supplied with Futaba and Jst plugs is for channel 4 to use as an engine stop switch but it is better to run a remote kill switch. If choosing to use the supplied unit then the Futaba plug will go to receiver and the Jst to make connection to engine stop switch (connecting wire not supplied)

For motor wires connect the centre to centre on esc and then connect the two outer wire and test to ensure your pawl runs anti-clockwise.

Do not connect any other battery to your receiver!!

The enclosed Flywheel will need swapping out in order for you to mount the starter