

a. Directly connect 4PIN label from Lamp Control Board to Remote (use the Remote Power 6-8.4V)
b. Lamp Control Board supply extend Battery(2-3S/6-12.6V). Use the extend Battery must move red line with 4PIN cable

Connect Remote CH2

Connect Remote CH1

Connect Cable x 1

CH2 LABEL

CH1 LABEL

CH2 Reverse Switch

TRACTION Lighting System

DC INPUT + 6-12V

Extend Power connect

Please Move Red line when use Extend Power

Lamp Control Board x 1

DRL LABEL

Top Lamp x 6pcs White hair Yellow 5mm

HL LABEL

Head Lamp x 2pcs White 5mm

FL LABEL

Front Fog Lamp x 2pcs White hair Yellow 5mm

Rear Fog Lamp x 2pcs Red 5mm

SL LABEL

Stop Lamp x 2pcs Red 3mm

CL LABEL

Steering Lamp Orange 5mm

BL LABEL

Reverse&Steering Lamp Yellow and White 3mm

CL LABEL

Reverse&Steering Lamp Yellow and White 3mm

Steering Lamp Orange 5mm